

OxBox

» Secondary Drainage Funnel Installation Without Laundry Disposal

Application:

Condensate drainage into an outlet box and associated manufacturers airgap device without using the outlet/laundry box for laundry disposal.

Installation:


Sioux Chief item #696-3 OxBox drain box can be used in conjunction with Sioux Chief item #696-CF secondary drainage funnel.

A) Secure 696-3 drain box in place or onto drainage DWV using appropriate fittings. Install in an accessible location so periodic trap clearing (if necessary), secondary drainage funnel clearing (if necessary) or other inspection can be maintained.

B) Knock out the top and bottom knockouts and secure funnel over line run into the drain box.

C) The drainage line is to be run into the box minimally 2". The funnel top section with 1" sight window installs through the top of the outlet box before being lowered and snapped onto the bottom section. Sight window to face out of box. Lower assembled funnel into place within the drain box.

D) Secure the funnel within the box by snapping the provided clip on the circular top section once the funnel is in place. Proper installation of the funnel requires the alignment ribs lowered into the box alignment grooves integrally molded in the box bottom.

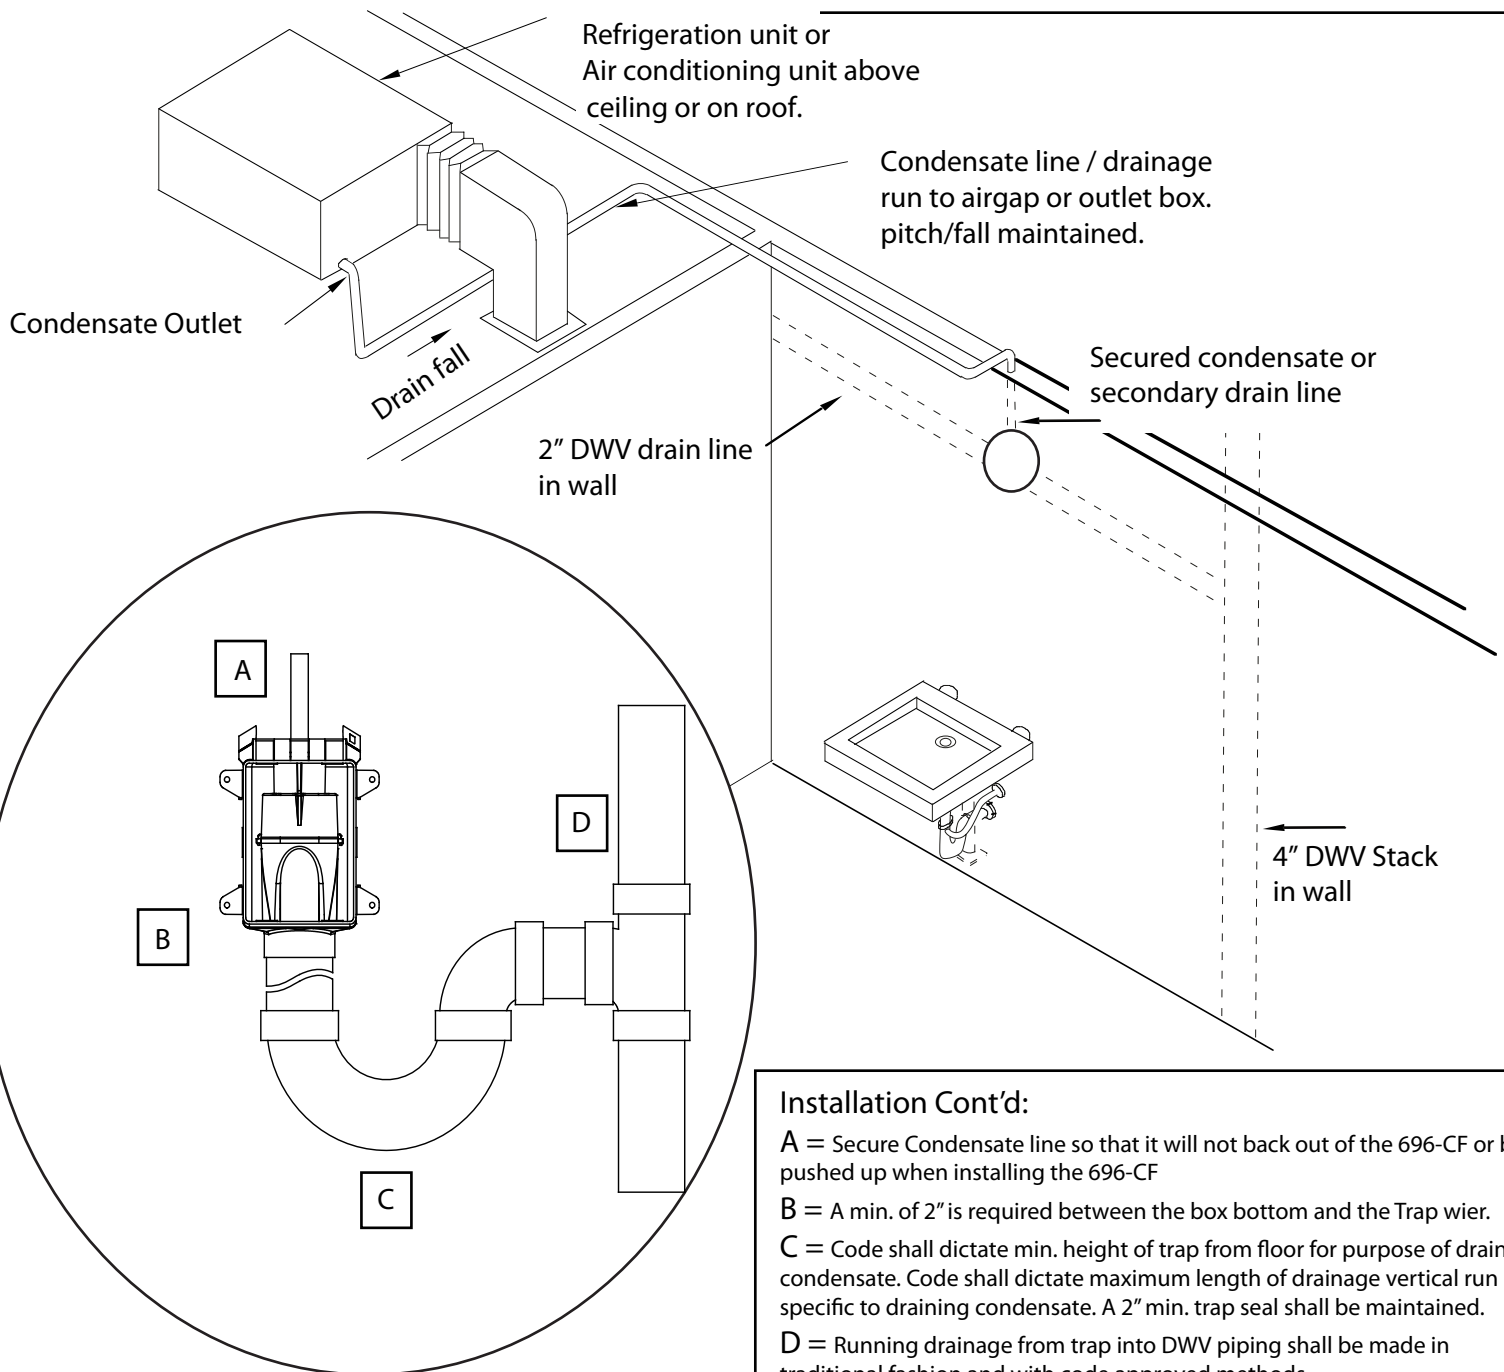

Installation Cont'd:

A = Secure Condensate line so that it will not back out of the 696-CF or be pushed up when installing the 696-CF

B = A min. of 2" is required between the box bottom and the Trap wier.

C = Code shall dictate min. height of trap from floor for purpose of draining condensate. Code shall dictate maximum length of drainage vertical run specific to draining condensate. A 2" min. trap seal shall be maintained.

D = Running drainage from trap into DWV piping shall be made in traditional fashion and with code approved methods.